PARTS LIST FOR MODEL PUR64LP

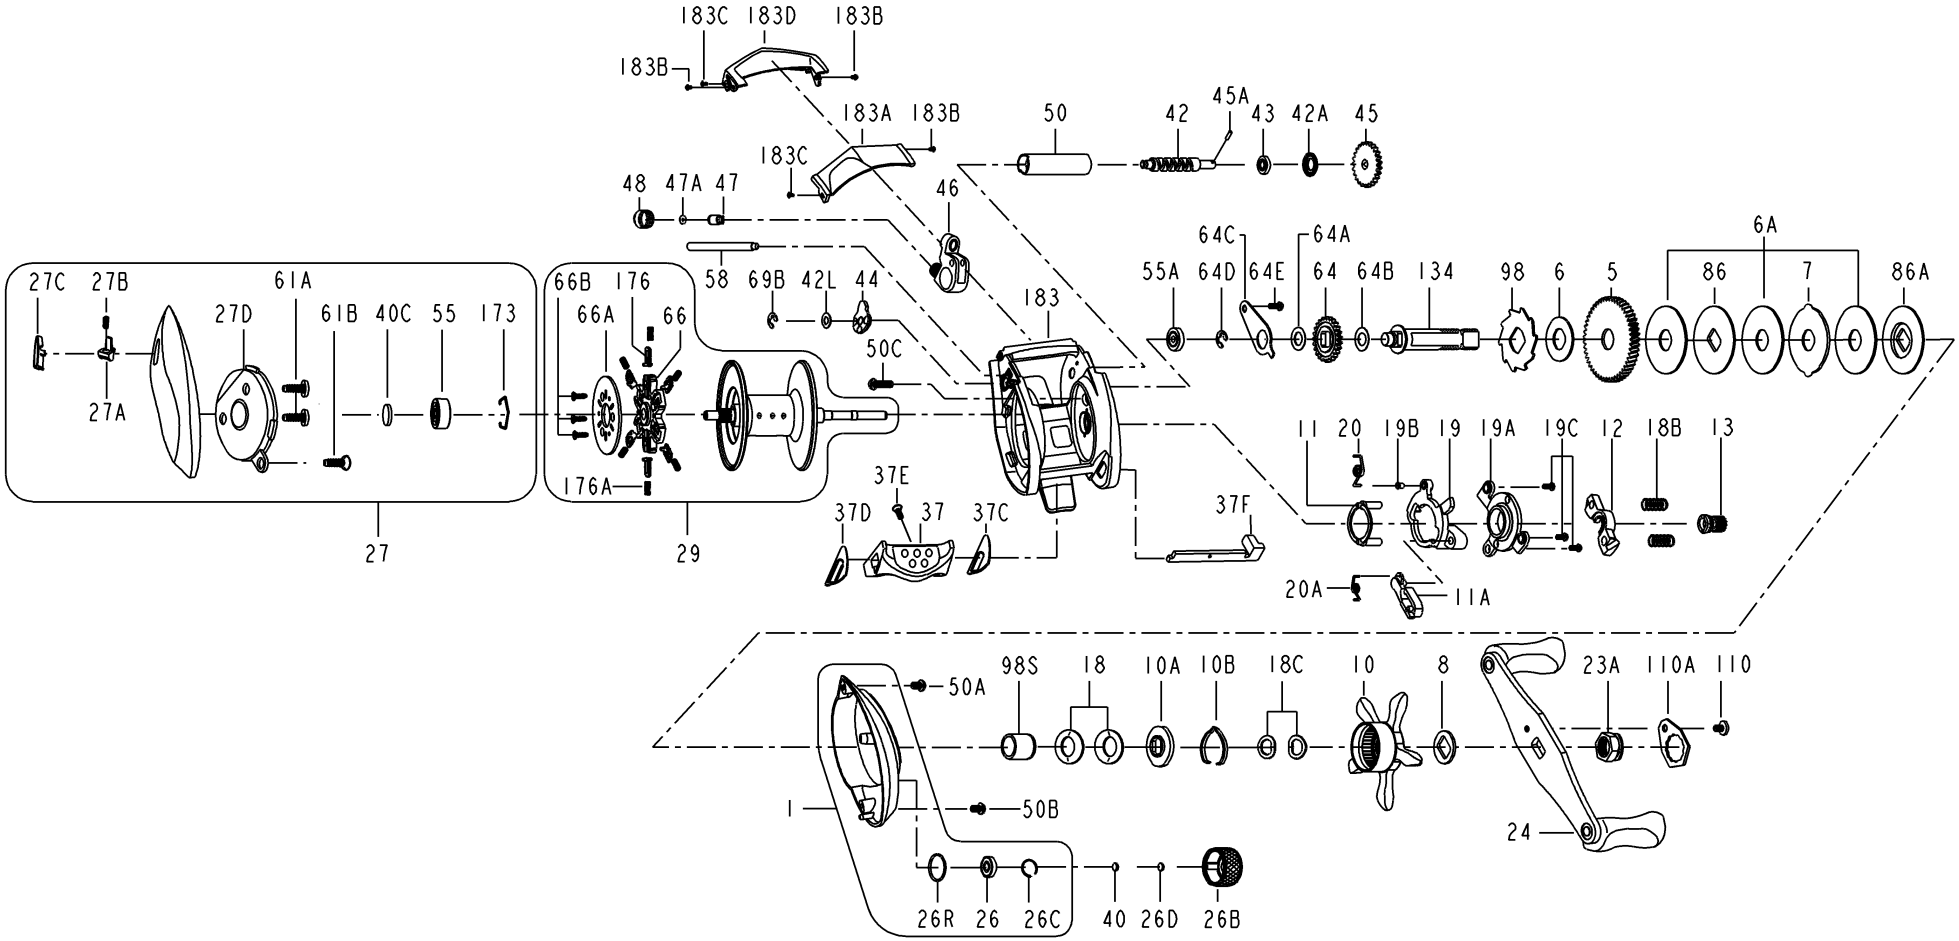

KEY NO.	PART NO.	DESCRIPTION
1	001 PUR	R.S. Plate Assembly
5	005 PUR	Main Gear
6	006 965	Washer, Ratchet
6A	006 PUR	Washer, Drag (3 Req)
7	007 PUR	Washer, Metal Ear
8	008 PUR	Washer, Handle
10	010 PUR	Star, Drag
10A	010APUR	Holder, Click
10B	010BPUR	Spring, Click Leaf
11	011 PUR	Holder, Yoke
11A	011APUR	Pawl, Return
12	012 PUR	Yoke
13	013 PUR	Pinion Gear
18	018 965	Washer, Drag Spring (2 Req)
18B	018BPUR	Spring, Clutch (2 Req)
18C	018CPUR	Washer, Spring (2 Req)

KEY NO.	PART NO.	DESCRIPTION
19	019 PUR	Cam, Clutch
19A	019APUR	Plate, Clutch Cam
19B	019BPUR	Bushing, Clutch Cam Plate
19C	019CPUR	Screw, Clutch Cam (3 Req)
20	020 PUR	Spring, Torsion
20A	020APUR	Spring, Return Torsion
23A	023APUR	Nut, Handle
24	024 PUR	Handle Assembly
26	026 PUR	Bearing, R.S. Plate
26B	026BPUR	Cast Control Cap Assembly
26C	026CPUR	Retainer, Bearing
26D	026DPUR	Washer, Tension
26R	026RPUR	'O' Ring
27	027 PUR	L.S. Plate Assembly
27A	027APUR	Pin, Locking
27B	027BPUR	Spring, Push Button
27C	027CPUR	Button Assembly
27D	027DPUR	Brake Cover Assembly
29	029 PUR	Spool Assembly

KEY NO.	PART NO.	DESCRIPTION
37	037 PUR	Clutch Bar
37C	037CPUR	Plate, R.S. Clutch Bar
37D	037DPUR	Plate, L.S. Clutch Bar
37E	037EPUR	Screw, Clutch Bar
37F	037FPUR	Link, Clutch Bar
40	040 PUR	Washer, Thrust
40C	040CPUR	Washer, Metal Thrust
42	042 PUR	Shaft, Worm
42A	042APUR	Bushing, R.S. Worm
42L	042LPUR	Washer, L.S. Worm
43	043 PUR	R.S. Worm Bearing
44	044PUR	Bushing L.S. Worm
45	045 PUR	Gear, Worm
45A	045APUR	Pin, Worm Shaft
46	046 PUR	Carriage Assembly
47	047 PUR	Pawl, Line Guide
47A	047APUR	Washer, Pawl
48	048 PUR	Screw, Pawl Cover

KEY NO.	PART NO.	DESCRIPTION
50	050 PUR	Shield, Worm Shaft
50A	050APUR	Screw, R.S. Plate
50B	050BPUR	Screw, R.S. Plate
50C	050CPUR	Screw, R.S. Frame
55	055 PUR	Bearing, L.S. Plate
55A	055APUR	Bearing, R.S. Frame
58	058 PUR	Post, Line Guide
61A	061APUR	Screw, Ring (2req)
61B	061BPUR	Screw, Spool Cover
64	064 PUR	Gear, Worm Drive
64A	064APUR	Washer
64B	064BPUR	Washer (G/Metal)
64C	064CPUR	Plate, Bearing
64D	064DPUR	Ring, Retaining
64E	064EPUR	Screw, Bearing Plate
66	066 PUR	Holder, Brake Shoe
66A	066APUR	Plate, Brake Holder
66B	066BPUR	Screw, Brake (3 Req)

KEY NO.	PART NO.	DESCRIPTION
69B	069BPUR	'E' Ring, Worm
86	086 PUR	Washer, Keyed
86A	086APUR	Washer, Metal Keyed Top
98	098 PUR	Ratchet, Anti-Reverse
98S	098SPUR	Sleeve, Roller Clutch
110	110 PUR	Screw, Handle Lock
110A	110APUR	Plate, Handle Locking
134	134 PUR	Gear Stud
173	173 PUR	Retainer, L.S. Bearing
176	176 PUR	Shoe, Brake (6 Req)
176A	176APUR	Spring, Brake Shoe (6 Req)
183	183 PUR	Frame
183A	183APUR	Thumb Rest
183B	183BPUR	Screw, RS Thumb Rest (3 Req)
183C	183CPUR	Screw, LS Thumb Rest (2 Req)
183D	183DPUR	Cover, Front Frame